




MOUNTING GUIDE

MANLEY / ORIGINAL SENDER / PRETTY SAVAGE

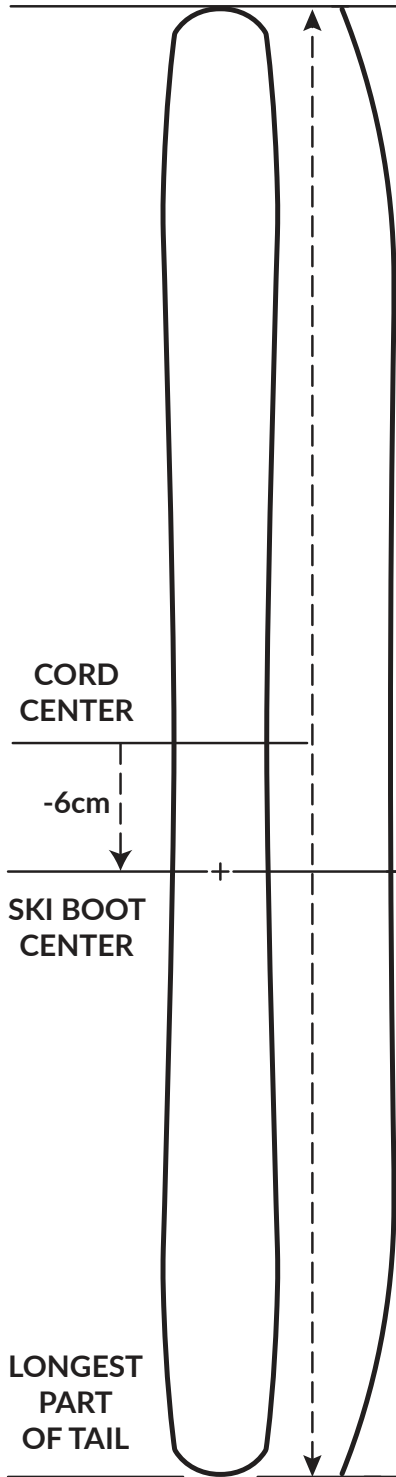

LENGTH	SKI BOOT CENTER
193 - Manley	- 6cm from Cord Center
186 - Original Sender	- 6cm from Cord Center
176 - Pretty Savage	- 6cm from Cord Center

The recommended boot sole center for these skis is 6cm back from cord center.

Alternate mounts for this family of skis are very much up to the skier and intended use. We have mounted these skis with boot sole at cord center, this is not for "all mountain" use and really is not recommended unless the skier's whole focus is spins and switch riding. These skis already have a centered stance which does cater to a variety of riding styles and urge the consumer to mount as per our recommendation.

EPOXY INSTRUCTIONS

1. Every pair of Instinct skis comes with high quality epoxy for binding screw installation.
2. The epoxy must be warm and remain so for 24 hrs after install. 25°C 77°F
3. Mix the entire volume of both parts well, taking care to use safe practices, gloves, eye protection and adequate ventilation.
4. Saturate the drilled holes and let the core soak up the adhesive for 10 minutes.
5. If there is no visible epoxy left add 1 drop per hole.
6. Install binding screws very carefully to ensure a complete and flush contact between binding and ski. - **Caution: Do not over tighten and strip screws at this point.**

DRILL BIT
3.5 X 9.0
 NO TAPPING REQUIRED